

**OPERATION MANUAL**

**METEOR  
CHRONOGRAPH**



**SPECIFICATIONS**

**METEOR CHRONOGRAPH**  
Technical Specifications


- Swiss made, precision ETA G10.711 quartz chronograph movement
- Display date window
- Solid Stainless Steel Case
- Mineral Crystal with anti-reflective coating
- Water resistant to 330ft/100m
- Diameter - 46mm  
Thickness - 12mm  
Weight - 4.7oz
- Serial numbered
- 2 year limited international warranty

**CHASE-DURER**


9601 WILSHIRE BLVD. #1118  
 BEVERLY HILLS, CA 90210 USA  
 TEL: 800.544.4365 / 310.550.7280  
 FAX: 310.550.0830  
 E-MAIL: CUSTOMER-SERVICE@CHASE-DURER.COM

[www.chase-durer.com](http://www.chase-durer.com)

**A: DISPLAY**

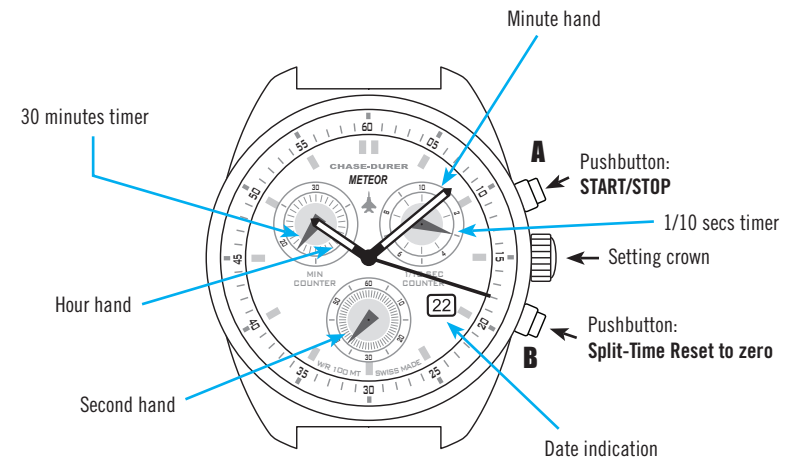

## A-1: MODE CHRONOMETRAGE / FUNCTION CHRONOGRAPH SIMPLE

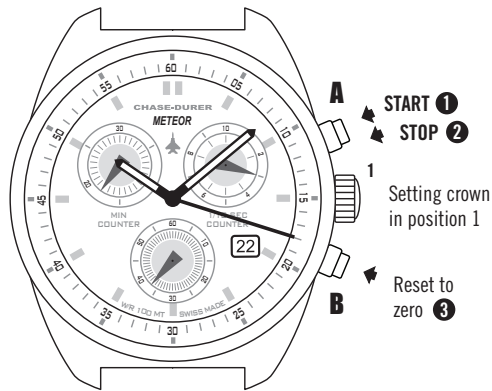

**START ①**  
**STOP ②**

Setting crown  
in position 1

Reset to  
zero ③

### WARNING:


Before each time, the hands should be put back to their original position. If necessary rest to zero with pushbutton B.

① to ③ order of functions

**ADD FUNCTION:** Order in which pushbutton should be pressed.




## B: TIME ZONE & DATE CORRECTION

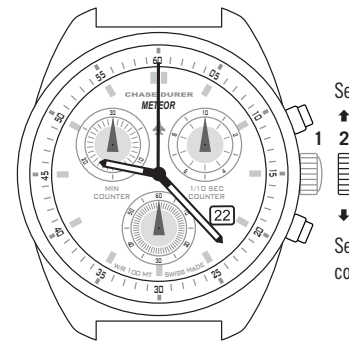

Setting crown in position 2

Setting date by turning crown  
counter clock wise

## C: TIME CORRECTION

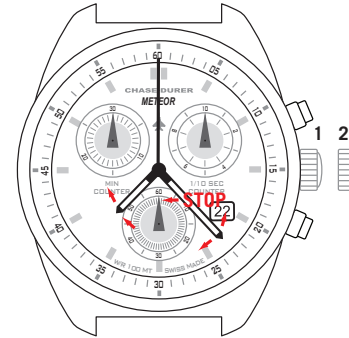


Setting crown in position 3  
**STOP-SECOND**


**HOURS/MINUTES**  
Date changes each time hour  
hand passes midnight

## A-2: TIMING MODE / SPLIT-TIME OR INTERMEDIATE TIMES FUNCTION

① to ⑦ order of functions

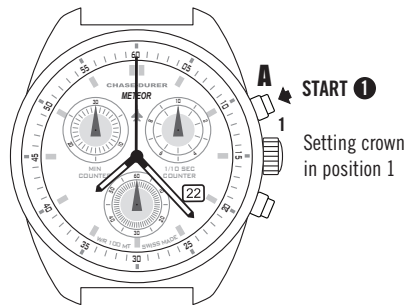


**START ①**  
Setting crown  
in position 1

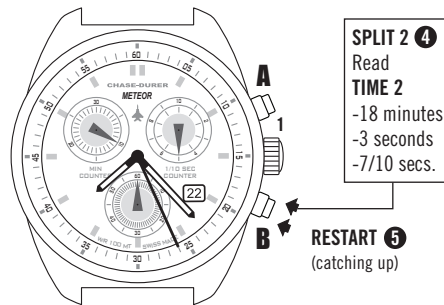


**SPLIT 2 ④**  
Read  
**TIME 2**  
-18 minutes  
-3 seconds  
-7/10 secs.

**RESTART ⑤**  
(catching up)

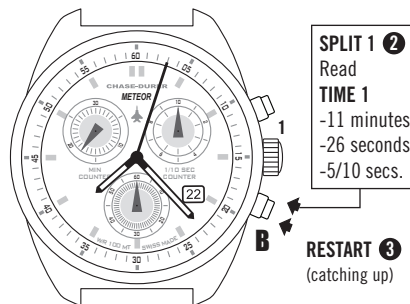

**SPLIT 1 ②**  
Read  
**TIME 1**  
-11 minutes  
-26 seconds  
-5/10 secs.

**RESTART ③**  
(catching up)

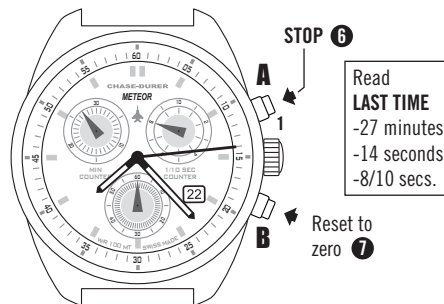


**STOP ⑥**

Read  
**LAST TIME**  
-27 minutes  
-14 seconds  
-8/10 secs.

Reset to  
zero ⑦

## D: RESETTING CHRONOGRAPH HANDS

The chronograph hands can be set at zero or at real time.

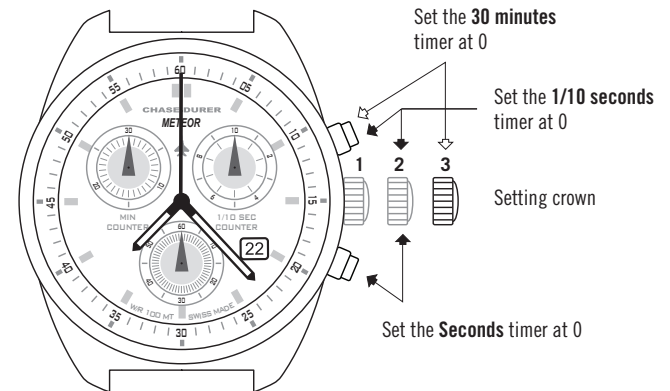

Set the 30 minutes  
timer at 0

Set the 1/10 seconds  
timer at 0

Setting crown

Set the Seconds timer at 0

### PUSHBUTTONS:

Press longer than 1 second to turn quickly.

**NOTE:** Do not keep setting crown in position 2 for more than 20 minutes (time could be lost). When setting crown is pulled out to position 3, movement will stop immediately (STOP SECOND).